



# Brother MFC-240C Teardown

The guide will give step-by-step instructions for disassembling the scanner section of the printer.

Written By: Andrew Adcock





## TOOLS:

 
 
 
- [Phillips #0 Screwdriver](#) (1)
  - [Flathead #2.5 Screwdriver](#) (1)
-

## Step 1 — Brother MFC-240C Teardown



- Completely lift up scanner portion of printer and detach visible USB chord.

## Step 2

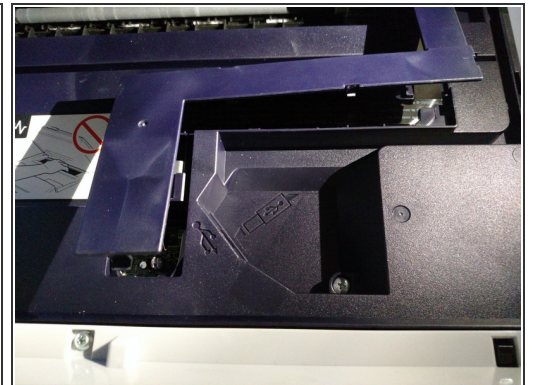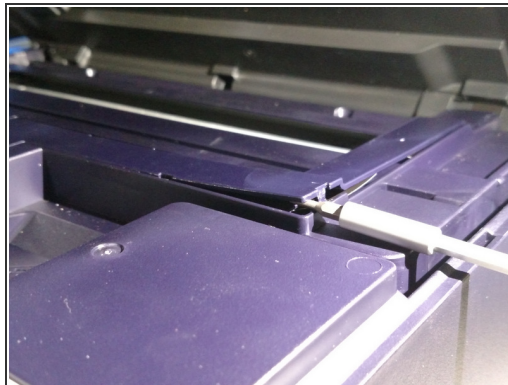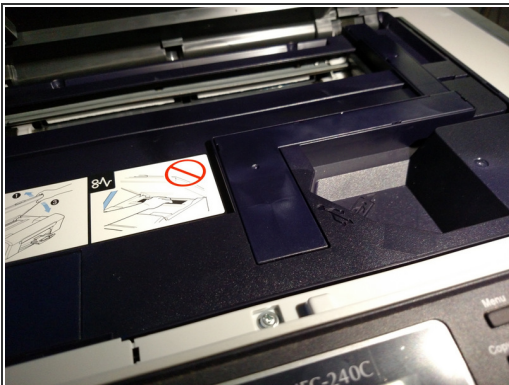

- Use flat head screwdriver to pry tabbed panel off.



## Step 3



 
- Gently lift up ribbon cable and pull it through holder then remove ribbon cable from its track.

## Step 4




- Using a flat head screwdriver, remove the 2nd tabbed panel.

## Step 5

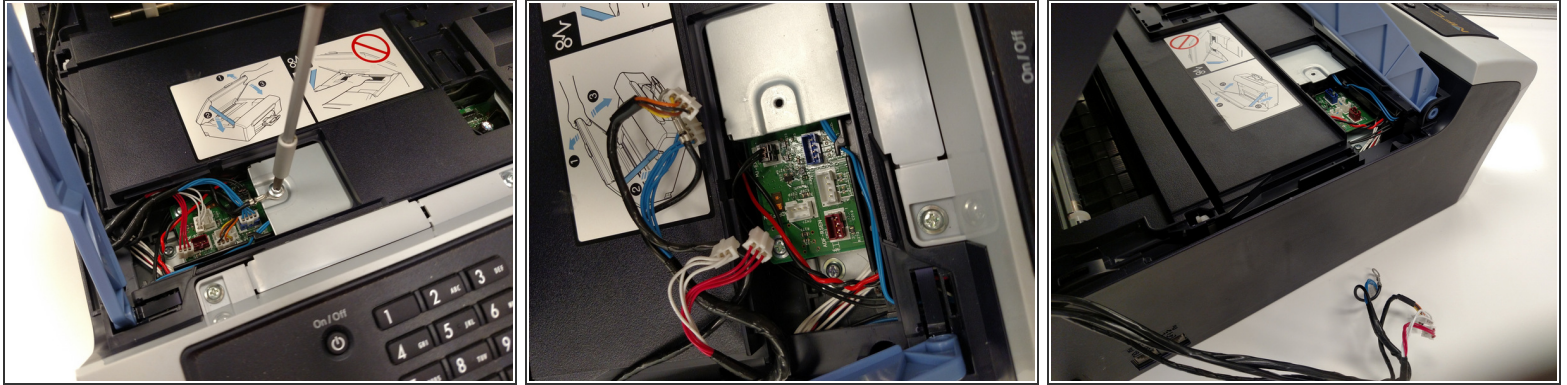

- Remove the 4 plugs and unscrew ground-wire then place the plugs to the side.


## Step 6

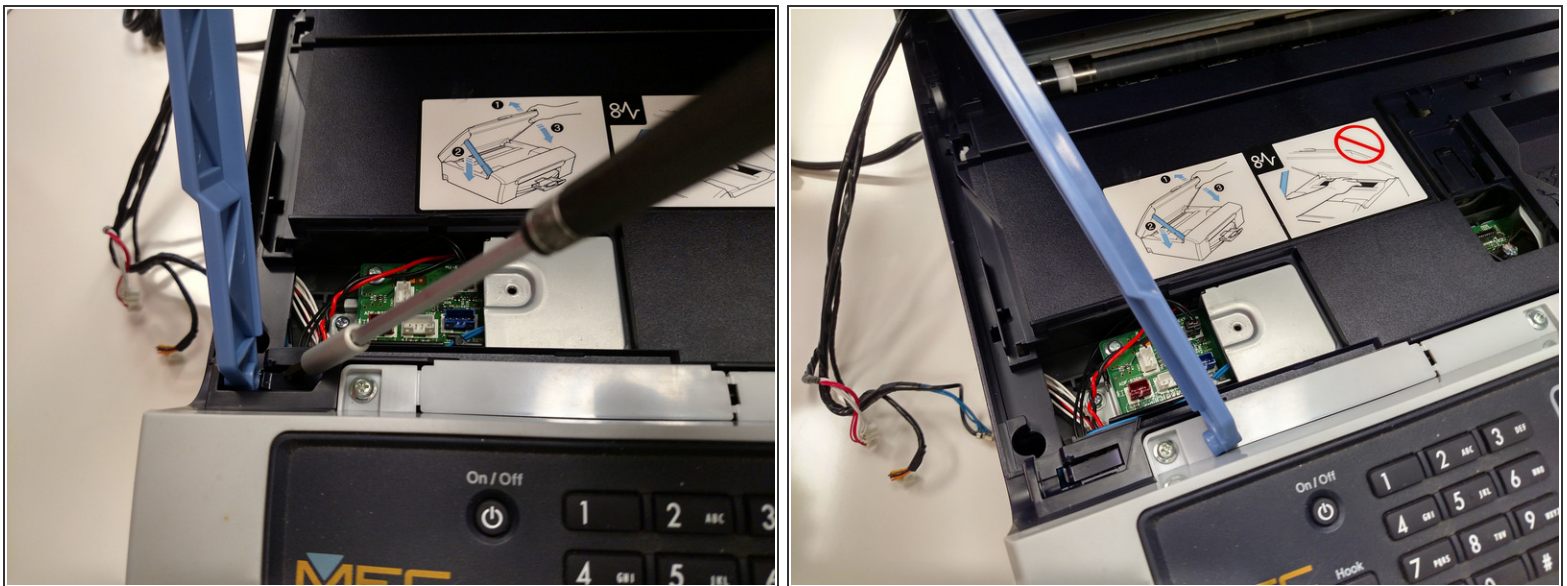 

- Using your screwdriver press down on the tab as shown. This allows the hinge to be removed from the printing body as seen in photo.




## Step 7

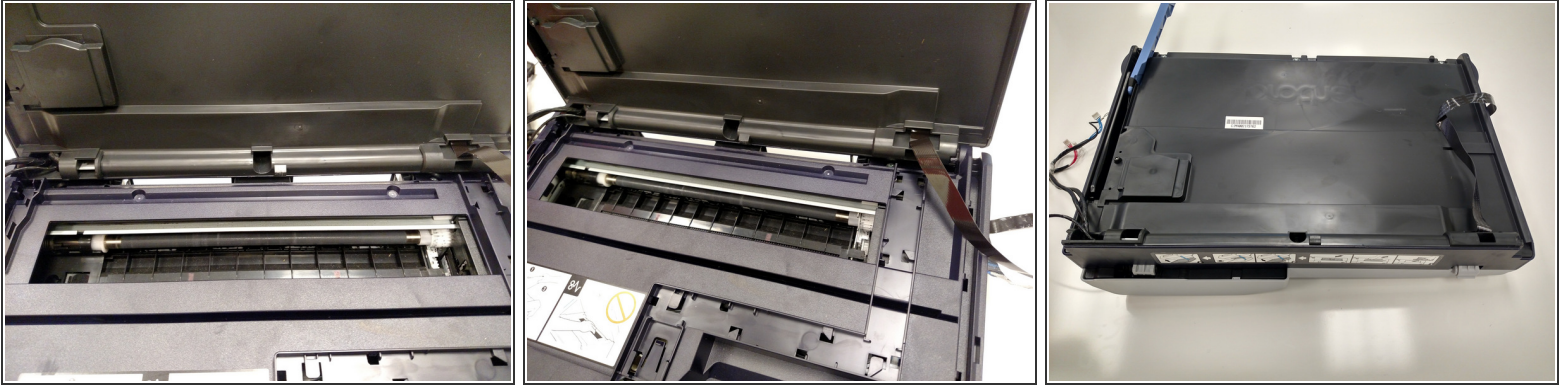 



- Extend scanner assembly completely to remove scanner portion.

## Step 8

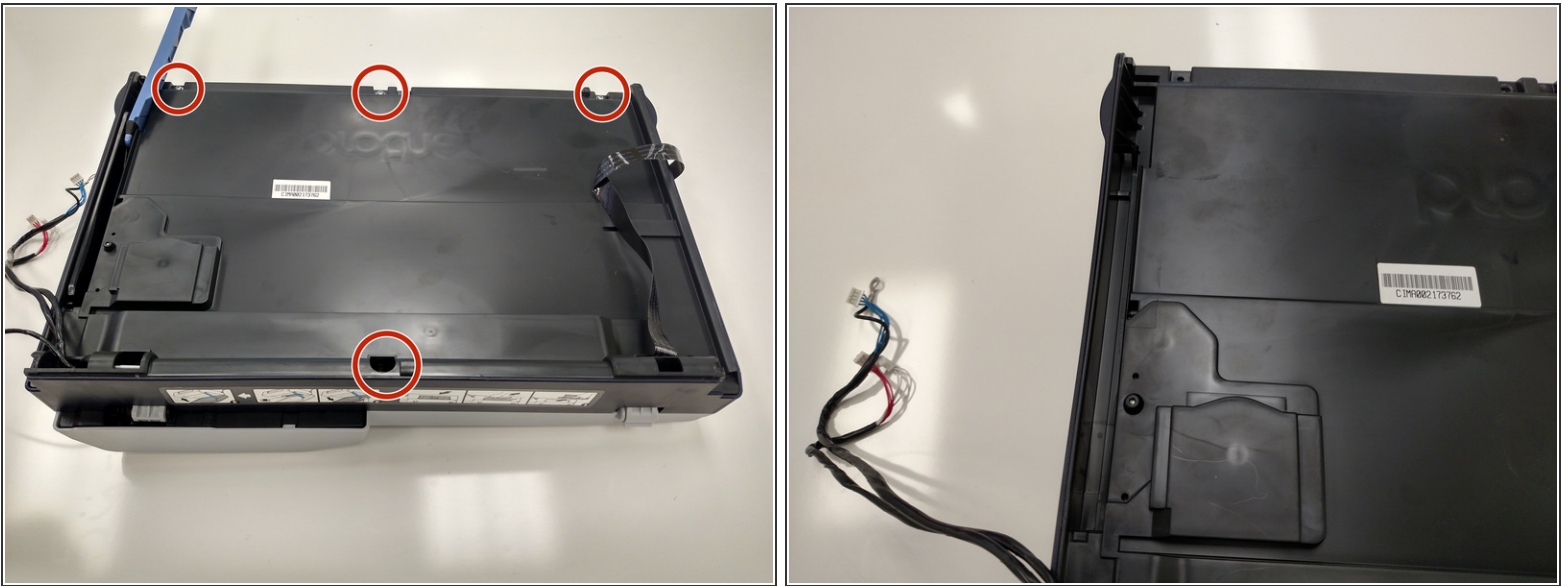 




- After removing the scanner assembly, place it on its head. Remove the hinge and 4 screws from the lower scanner portion using Philips-head screwdriver.

## Step 9

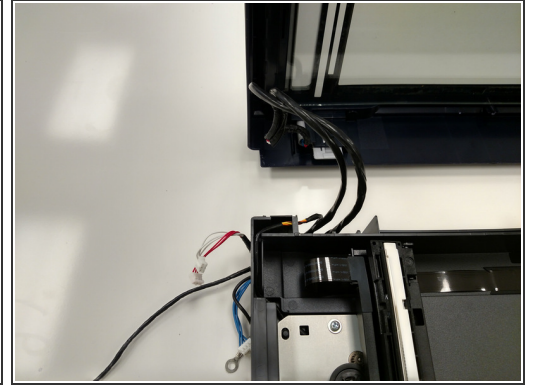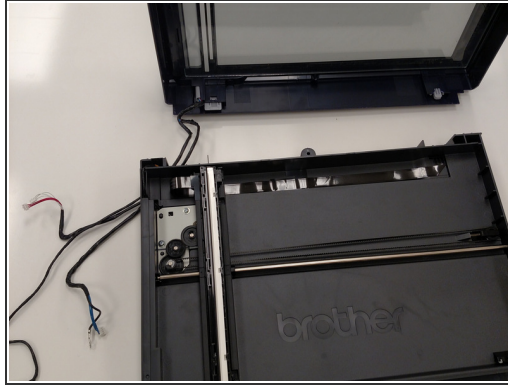  

- Place on opposite face, and gently pry upper and lower scanner portions apart. Remove the 4 plugs from the lower scanner portion.


## Step 10

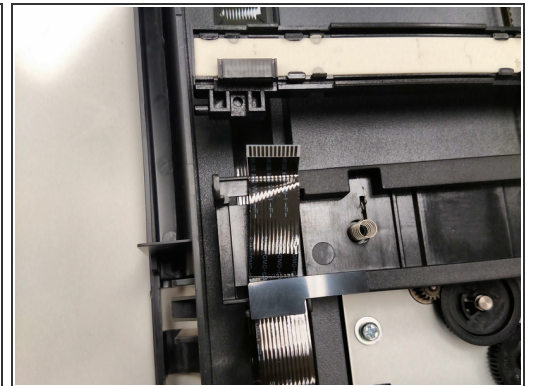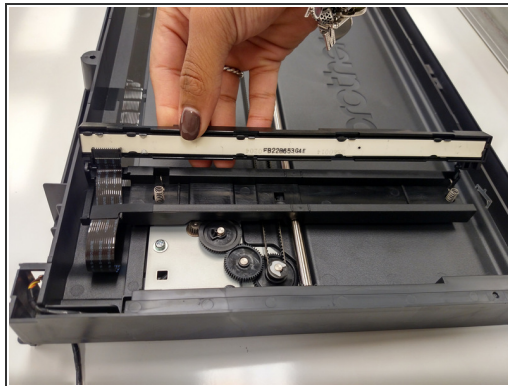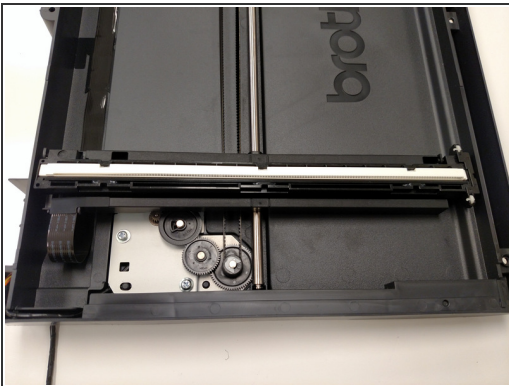   

- To remove image sensor, detach the wire strip and pull it out. Remove the two springs that are under the image sensor after its removal.




## Step 11

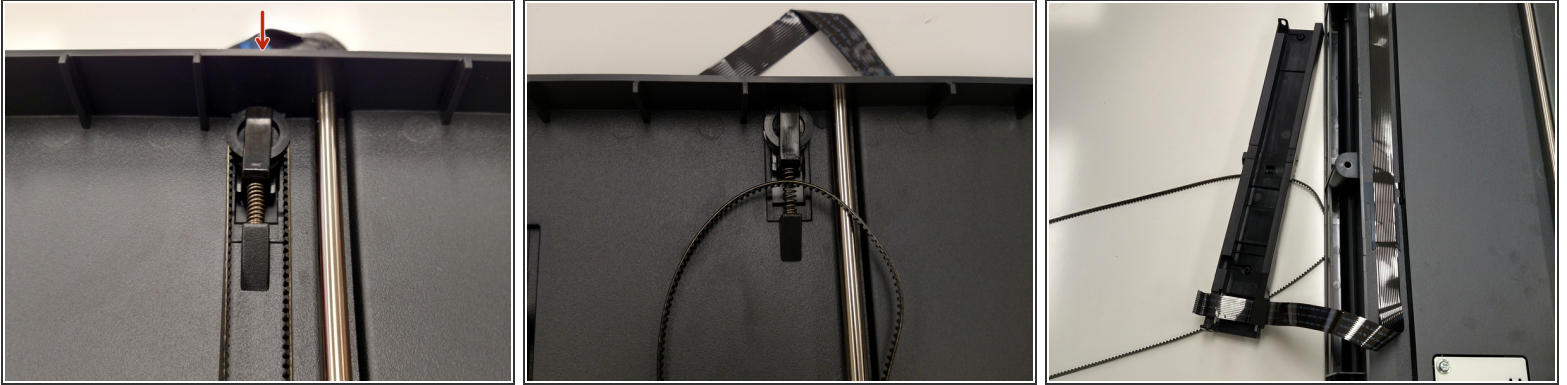 

- To remove the belt, first place the image sensor to the side then press down on the gear base to loosen belt and remove from the gear.



## Step 12

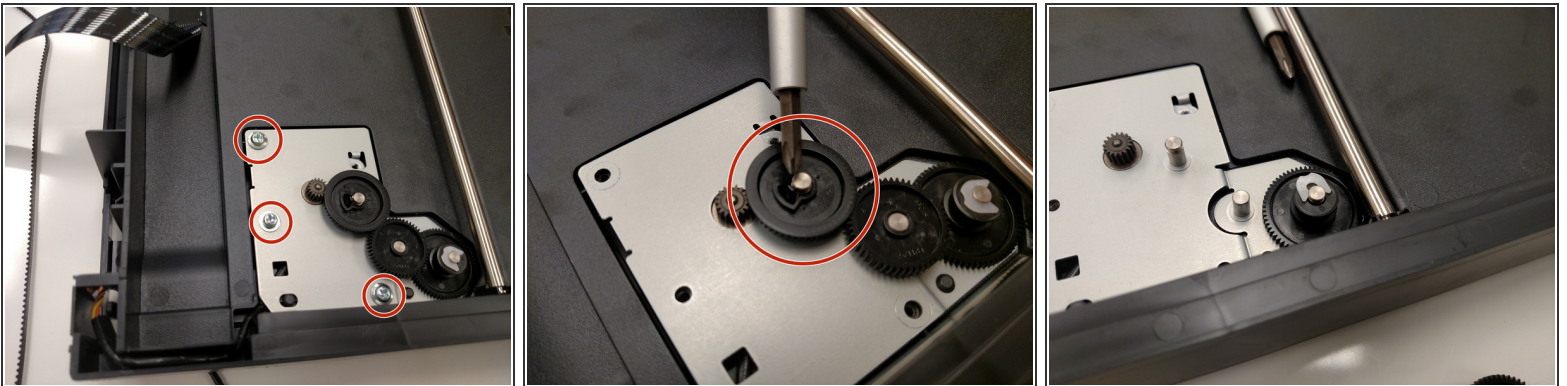 

- Remove the 3 highlighted screws. For the gear driven by the motor, press the tab in highlighted gear to remove set gear. For the gear that was attached to belt, remove C-clip to remove gear then pull the last gear off.





## Step 13

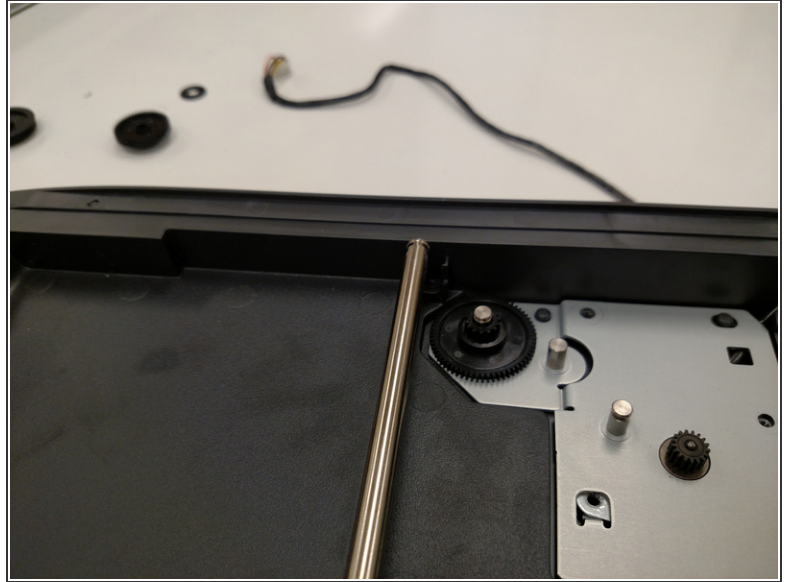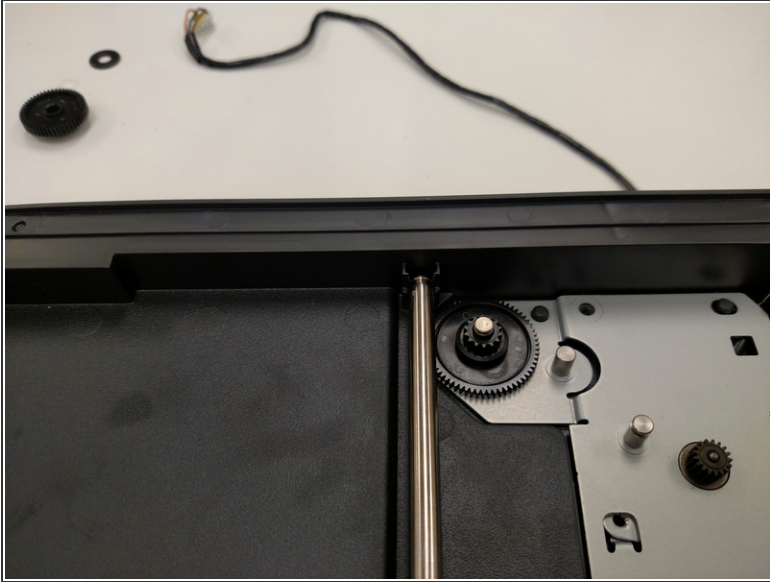  

- After the removing gears, lift up on the retained end of metal rod and pull out the other side.

## Step 14

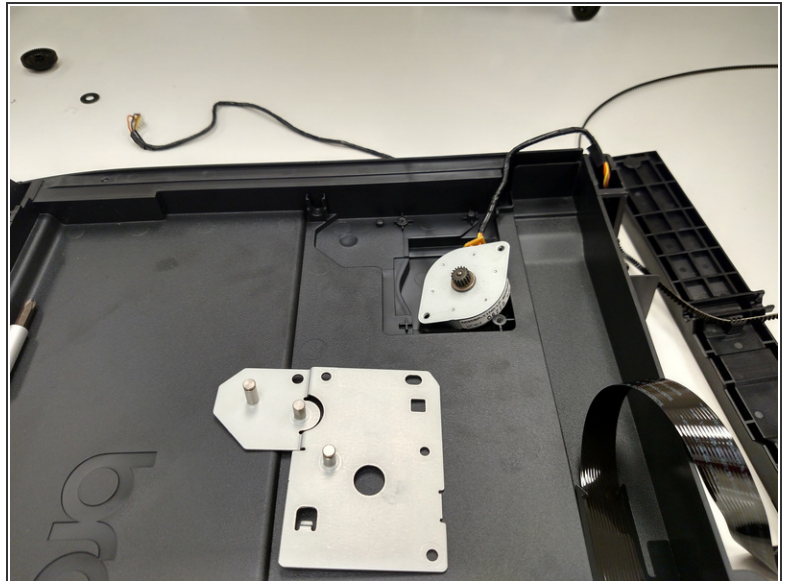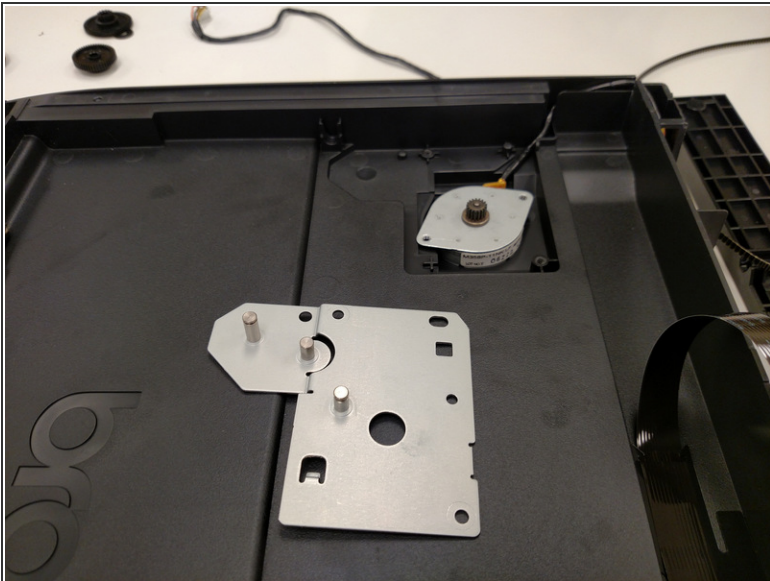  

- Once the rod has been removed, remove the metal plate in which the gears were sitting then take out the motor.